


## **USER MANUAL** FPT MOTORS ADBLUE EMULATOR INSTALLATION

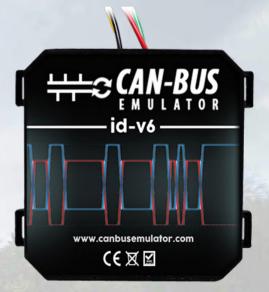



www.canbusemulator.com

+90 530 937 46 36

erenakarsubasi

All after-maintenance operations are carried out by the engine computer and there is no additional AdBlue computer.

## PUMP EMULATOR SIDE

EMULATOR	WEHICLE SOCKET	CONNECTION TYPE
YELLOW	NOX PIN 4	CONNECT
GREEN	NOX PIN 3	CONNECT
BLACK	PUMP PIN 8	CUT
RED	PUMP PIN 9	CUT
WHITE	PUMP PIN 3	CUT
BROWN	PUMP PIN 10	CUT
BLUE	PUMP PIN 11	CUT
PINK	PUMP PIN 12	CUT

## **EXHAUST EMULATOR SIDE**

EMULATOR	WEHICLE
RED	+24(POWER)
BLACK	GND
GREEN	DOSING SOCKET PIN 1
GREEN	DOSING SOCKET PIN 2
YELLOW	DOC TEMPERATURE INPUT SOCKET PIN 1
YELLOW	DOC TEMPERATURE INPUT SOCKET PIN 2
BLUE	DPF TEMPERATURE INPUT SOCKET PIN 1
BLUE	DPF TEMPERATURE INPUT SOCKET PIN 2
WHITE	SCR TEMPERATURE OUTPUT SOCKET PIN 1
WHITE	SCR TEMPERATURE OUTPUT SOCKET PIN 2
BROWN	SCR TEMPERATURE INPUT SOCKET PIN 1
BROWN	SCR TEMPERATURE INPUT SOCKET PIN 2

After the connection is made, you need to remove the sockets.

Insurances to be drawn:

All fuses related to Scr, pump, NOX, NH3 and temperatures must be removed.